

**JUST LIGHT.**

## Removal instruction

999229/999236/999534/999535/901435  
900010/900011/900012/900013

Instructions on how light sources and separate control gears can be removed without being permanently damaged for verification purposes by market surveillance authorities:

An Instruction on how to remove the light source from a containing product is provided for reference:



The removal may only be carried out by a professional.

Step 1: Remove the nut.



Step 2: Remove the diffusion plate.



Step 3: Remove the screws.



Step 4: Remove the cable.



Step 5: Remove the nut and the light source plate.



Step 6: Fix the cable to the new light source. Take care of the LEDs during this step, do not touch them.

Step 7: Provide the rated current to the light source and ErP testing.